


1. Find the IP address of the X-66 by opening your router home page or by using a network scanner.
2. Open a browser window on your computer and type the IP address into the search bar.
3. User name is **admin** and Password is **admin**.
4. Select your language.
5. In the main page (**Serial2Net**) change SSID to **X-66** And Serial Configure to **9600,8,n,1** then click **APPLY**.

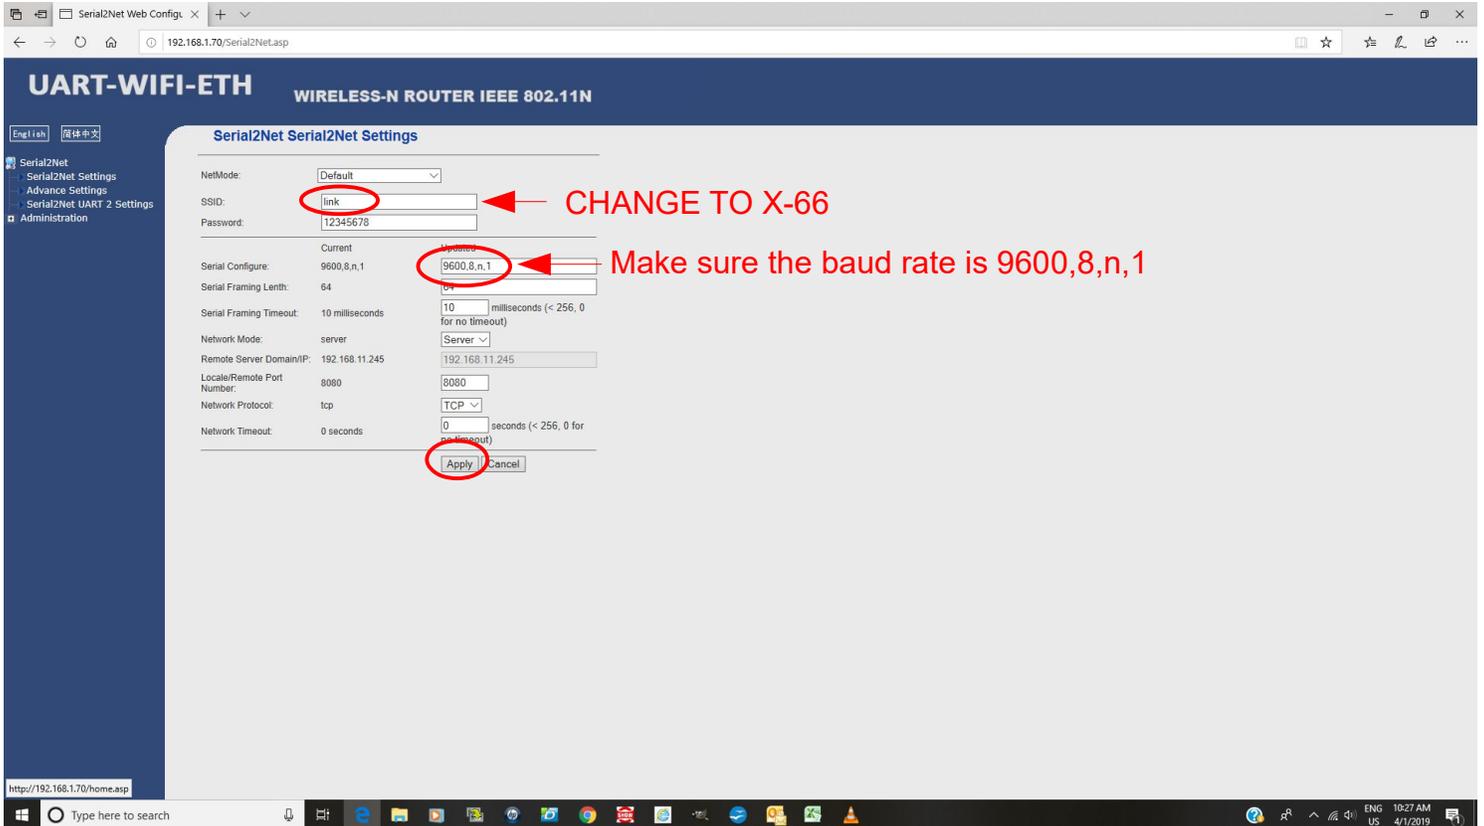

6. Next click the logo for the home page and open the **Internet Settings** page and select **WAN**.
7. In WAN Connection type: select **DHCP (Auto Config)**.
8. **Change the Host name to X-66** and click **Apply**.
9. This will reset the Ethernet card in the X-66 to the default settings.

Click here for the home page

